


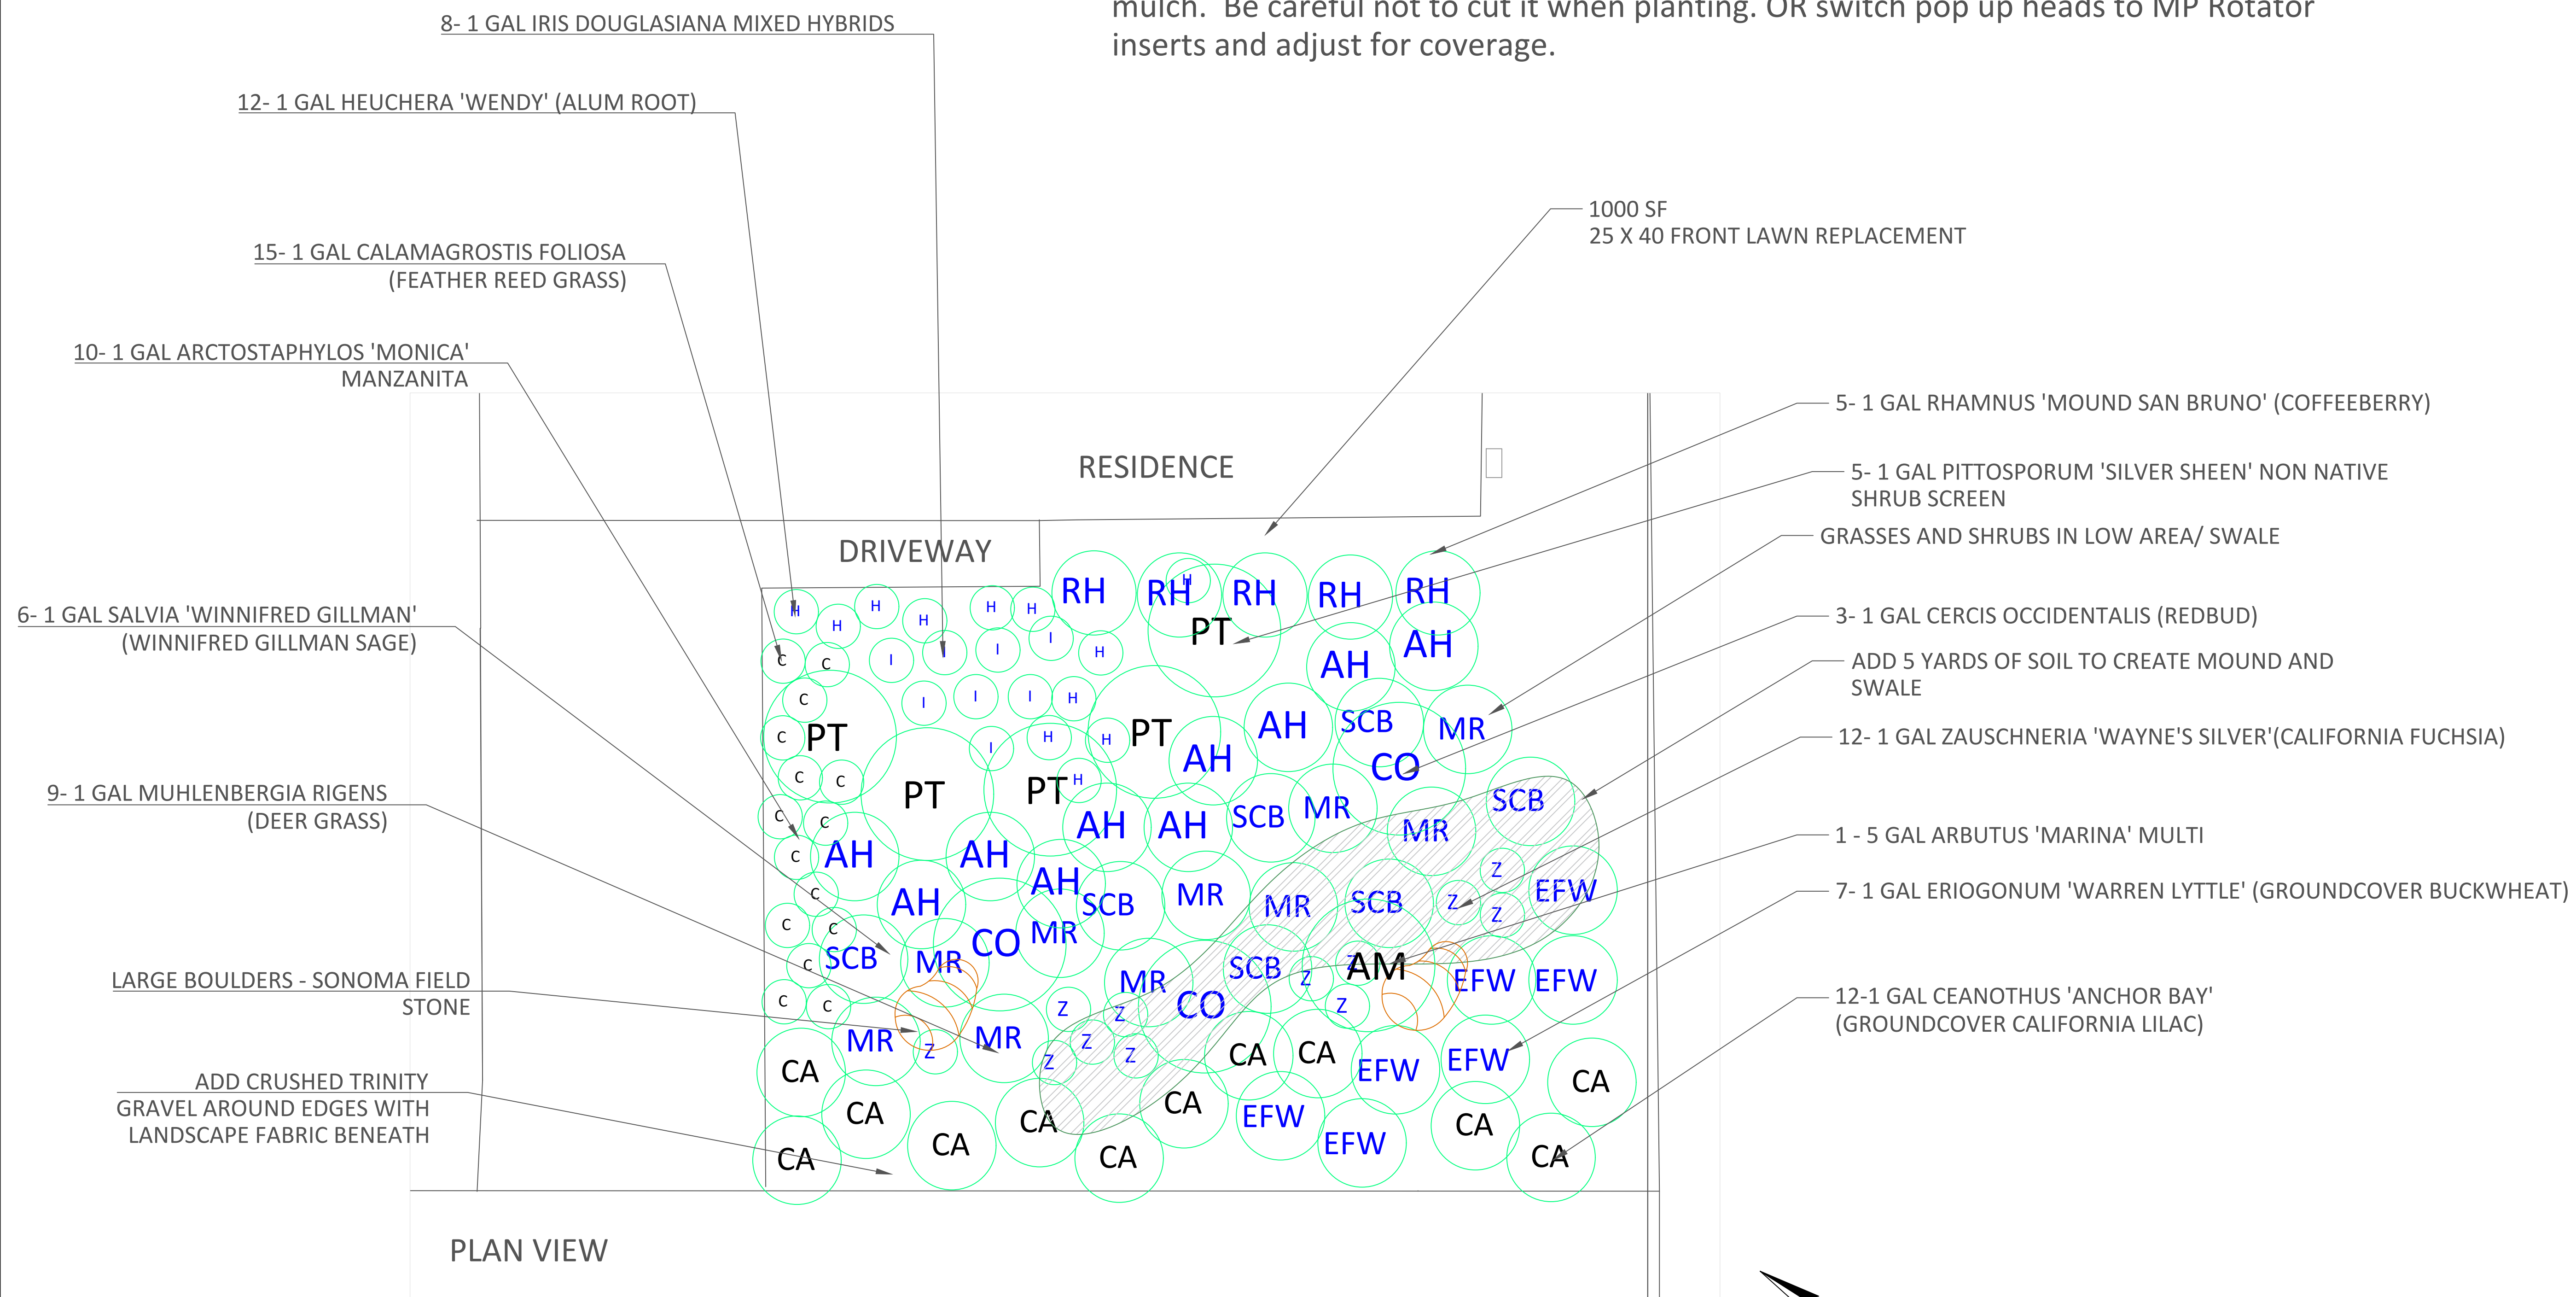

SCOPE OF WORK:

1. Remove Turf: - Sheet Mulch with 1" cardboard, 2" compost and 3-inches of "Arbor Mulch". Let set with weekly irrigation for 1 month minimum
OR Cut turf and remove to landscape waste bin.
2. Add swale, boulders and additional 6 yards of top soil
3. Install plant materials
4. Install inline drip irrigation - drip may be added on top of compost and under arbor mulch. Be careful not to cut it when planting. OR switch pop up heads to MP Rotator inserts and adjust for coverage.




SMALL TURF REPLACEMENT - PART SUN ANYWHERE IN CALIFORNIA WEST FACING

No.	Revision/Issue	Date

DESIGNED BY
APRIL OWENS
EXECUTIVE DIRECTOR
HABITAT CORRIDOR
PROJECT 707.634.6192

Project Residential	Sheet
Date OCT 2017	L-1
Scale 1"=4'-0"	

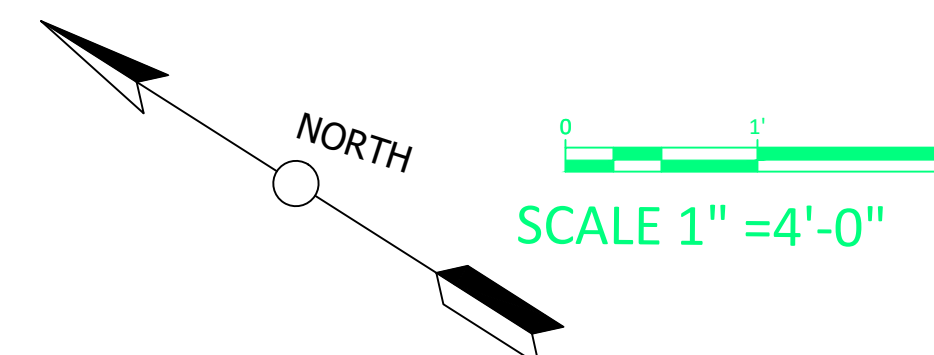

REVDATE USER